

W415

A compact and versatile package

- Up to 7000h lamp life with Eco+
- WXGA resolution - 4500 lumens
- Ultimate Control - Full support for Crestron, Extron, AMX, PJ-Link and Telnet LAN commands
- Installation flexibility – Vertical lens shift and 1.5x zoom



TEXAS INSTRUMENTS

HDMI™

HIGH DEFINITION MULTIMEDIA INTERFACE

CRESTRON
RoomView®
connected



PJLink™

Full 3D



W415

Widescreen HD Ready WXGA clarity combined with vertical lens shift and amazing colours, make the compact Optoma W415 projector an ideal candidate for both desktop and installation use.

Full support for Crestron Roomview, Telnet, Extron IP Link, AMX dynamic device discovery and PJ-Link protocols, allow almost all aspects of the W415 to be controlled across a network, keeping you in control, wherever you are.

The environmentally friendly W415 has energy saving features including Eco+ lamp power management, <0.5W standby mode and auto power off, saving you both time and money. Our unique Optoma Colour Guarantee ensures hassle-free, long-lasting projection.

order abortion pill online [abortion pill](#) buy the abortion pill online

3D Technology

Using the inherent speed of DLP® technology, Optoma Full 3D projectors can output video and images at an astonishing rate of 120Hz, allowing you to show full screen, full colour, stereoscopic 3D. The 3D effect is generated by splitting this signal into two standard video streams, one for each eye. Using DLP® Link™ technology, the 3D glasses synchronise with the image on screen to filter each stream to the correct eye. Your brain then combines the two streams to make them jump into life.

The W415 supports multiple 3D formats from various devices such as PC, Blu-ray 3D™, Sony® PS3, Microsoft® Xbox 360 or 3D TV broadcast systems.

order abortion pill online [abortion pill](#) buy the abortion pill online



True WXGA Resolution



The W415 is the perfect companion for widescreen laptops. Your presentations will appear as sharp and detailed as they do on your widescreen laptop in WXGA (1280 x 800) resolution. WXGA resolution gives 30% more pixels than XGA.



Easy installation - 1.5x zoom and lens shift

The W415 can project a 100" diagonal image from any distance between 3.14m and 4.74m. The Lens Shift system can be used to adjust the vertical position of the projected image within the range detailed in the diagrams below.

When replacing existing projectors, the 1.5x zoom and Lens Shift systems greatly increase your installation flexibility.

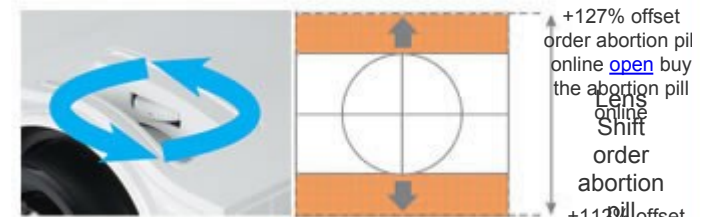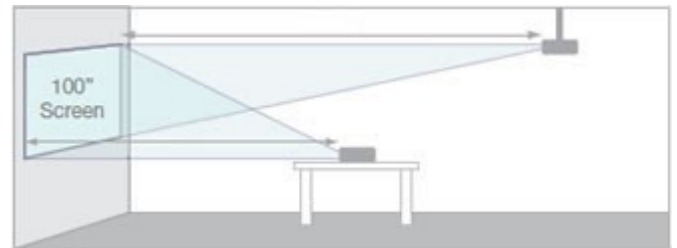

DICOM simulation mode

Designed specifically for larger meeting rooms and lecture theatres, the W415 includes a special DICOMsim mode that has been specially tuned for viewing greyscale images, perfect for viewing X-rays and scans during medical training.*

order abortion pill online [abortion pill](#) buy the abortion pill online



*The W415 is not suitable for use in medical diagnosis.

Clear, focused Images


DarkChip3™ from Texas Instruments, combined with Eco+ dynamic lamp technology produce a stunning 15,000:1 contrast ratio for pin sharp graphics and crystal clear text. Crisper whites, ultra-rich blacks makes images come alive and text easier to read - ideal for business and education presentations.



15,000:1 Contrast Ratio

Eco+ mode

Saving energy, saves money! Eco+ technology reduces the power consumption to as little as 30%. This intelligent feature also has a positive effect on the lamp life, increasing it up to 70% while lowering the total cost of ownership and reducing maintenance*.

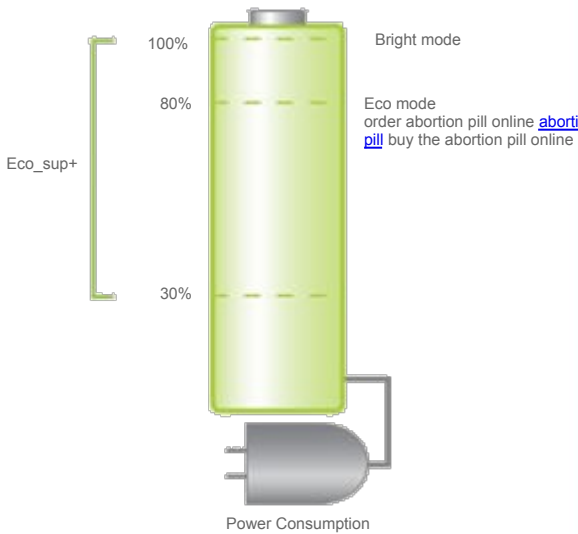

Dynamically adjusts the brightness and power consumption



Bright scene

~ 100% Power consumption

Dark scene

~ 30% Power consumption

System integration and control

Using the free Crestron Roomview software, multiple W415 can be monitored over LAN and also provide the user with an email message alert in case an error occurs or a lamp fails. Cut up to 30% from your energy bills using 24-hour automated power scheduling to ensure that projectors power off when not in use.

order abortion pill online [abortion pill](#) buy the abortion pill online

The web browser interface and full support for Extron's IP Link, AMX dynamic device discovery and PJ-Link protocols, allow almost all aspects of the W415 to be controlled across a network, reducing installation costs and keeping you in control, wherever you are. While RS-232 connectivity ensures legacy support for existing control systems.



Global monitoring of all AV devices




Track projector lamp life



Email alerts and instant notifications
help desk requests, service
reminders, device failure or theft



Event Scheduling

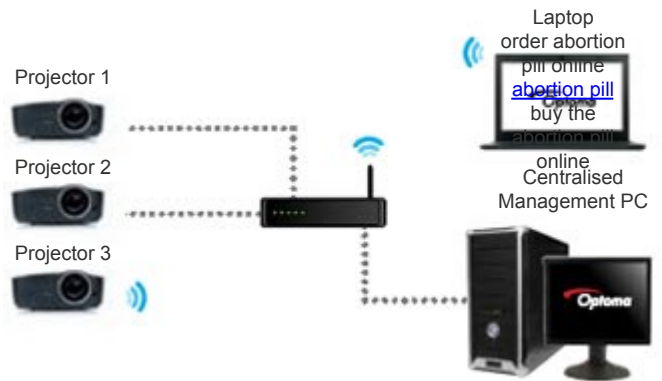


Projector Name	Power on/off	Display Usage	Help	Schedule	Emergency Type	Power Status
EWB65	Green	██████████	?	✓	🌿	Normal
EWB65	Red	██████████	?	✓	🔥	Low Power

Download Crestron RoomView® Express software from:
order abortion pill online [open](#) buy the abortion pill online

www.crestron.com/getroomview

+12v Trigger

Power on both your projector and screen at the touch of a single button. For ultimate convenience, connect an Optoma electric screen directly to your W415.

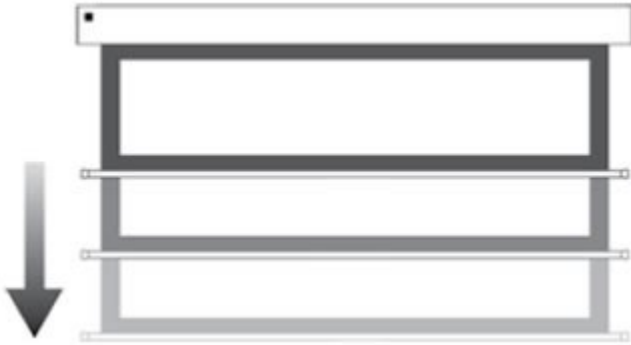

For more info on Optoma screens, please visit www.optomaeurope.com

Easy lamp replacement

In applications requiring smooth continuous operation, minimising service time is essential. The W415 lamp can quickly be replaced without the need to remove the projector from where it is installed.

Extra features

Direct & Signal Power ON -Start up time can be significantly reduced if standby mode is bypassed, eliminating the need to use the 'Power' button on the remote control or the projector keypad.

order abortion pill online [open](#) buy the abortion pill online



Direct Power ON

order abortion pill online [abortion pill](#) buy the abortion pill online

switches the projector on when the power cable is inserted into an active power outlet.

order abortion pill online [abortion pill](#) buy the abortion pill online



Signal Power On switches the projector on when an active VGA source is connected to the unit.



Key pad lock –once enabled prevents unauthorised adjustments ensuring the projector can only be controlled via the remote control.



Logo capture -customise your start up screen

order abortion pill online [abortion pill](#) buy the abortion pill online



Easy to use remote with laser pointer, mouse control and 1.2kg direct source selection

ECO AV mute

Stay in control of your presentation with the Eco AV mute feature. Direct your audience's attention away from the screen by blanking the image when no longer needed. This also instantly reduces the power consumption to 30%, further prolonging the life of your lamp.

order abortion pill online [abortion pill](#) buy the abortion pill online



Eco AV mute off

order abortion pill online

[abortion pill](#) buy the abortion pill online

pill online

Eco AV mute on

30% Power consumption

order abortion pill online [open](#) buy the abortion pill online

100% Power consumption

order abortion pill online [buy](#)

[abortion pill](#) buy the abortion pill online

pill online

Auto power off

There may be instances when the projector is left running when not in use. To help save energy if the projector is left running and no source is detected, the "Auto Power Off" feature automatically turns off the projector after a set period of time.

Environmentally friendly

To achieve the maximum 6500hrs² lamp life, the projector should be operating in Eco+ mode and the auto power off feature should be enabled to automatically switch off the projector if it is accidentally left on. Enabling the <0.5W standby mode ensures the minimum energy consumption when the projector is not switched on.

order abortion pill online [abortion pill](#) buy the abortion pill online



We know that improving our products is the best way to reduce our impact on the environment. That's why at Optoma, we design our products to have a long usable life, use fewer materials, ship with the minimum packaging and be free of all possible toxic substances. Naturally, energy efficiency and being recyclable are built in at the design stage. With each new product, we strive towards minimising our environmental impact. For full details of Optoma Project Green please visit our website.


order abortion pill online [abortion pill](#) buy
the abortion pill online

W415 Specification

Display Technology	Single 0.65" DarkChip 3 WXGA DLP® Technology by Texas Instruments
Native Resolution	WXGA 1280 x 800
Brightness ¹ (Bright Mode)	4500 ANSI Lumens
Contrast	15,000:1
Noise Level (Eco mode)	32dB
Weight (kg)	3.4
I/O Connectors	HDMI, DisplayPort, 2x VGA (RGB/YpPr), S-Video, Composite, 2 x Audio In (RCA/3.5mm), Audio Out 3.5mm, VGA Out, RJ45, RS232, USB service, 12V trigger
Maximum Resolution	Full HD 1920 x 1080
Computer Compatibility	UXGA, SXGA+, HD, WXGA, XGA, SVGA
Video Compatibility	PAL SECAM 576i/p, NTSC 480i/p, HD 720p/1080i/1080p
Displayable Colours	1.07 Billion
Projection Lens	F/2.42~2.97; f=20.7~31.05mm, 1.5x Manual Zoom
Throw Ratio	1.46 - 2.2:1, Offset: 112%~127%
Projection Screen Size	0.76 - 7.62m (30" - 300") Diagonal 16:10
Projection Distance	1.2 - 10m
Zoom Type	1.5x Manual
Aspect Ratio	16:10 Native, 16:9/4:3 Compatible
Offset	112% ~ 127%
Horizontal Scan Rate	15 - 91kHz
Vertical Scan Rate	24 - 120Hz
Lamp Type	280W
Lamp Life ² Eco+/Eco/Bright	7000/4000/3000 (hrs)
Keystone Correction	± 40° Vertical
Dimensions (W x D x H) (mm)	286 x 266 x 124
Power Supply	100-240V, 50-60Hz
Power Consumption	290W Bright mode / 250W Eco mode (<0.5W Standby)
Uniformity	85%
Security	Security bar, Kensington lock, password protection
Standard Accessories	Carry bag, lens cap, AC power cord, VGA cable, remote control, 2x AA batteries, quick start card, CD user manual
Optional Accessories	DLP® Link™ 3D glasses, wireless, ceiling mount
RoHS	Compliant
Lens Shift	+15% Vertical
3D Support	Full 3D - The 3D features of Optoma projectors can only be used with compatible 3D content. Typical applications include use with 3D educational or 3D design and modelling systems. 3D TV broadcast systems, (SKY in the UK), Blu-ray 3D™ and 3D games from the Sony® PS3 or Microsoft® Xbox 360 are now supported as part of the HDMI v1.4a specification.
3D Compatibility	Side-by-Side:1080i50 / 60, 720p50 / 60 Frame-pack: 1080p24, 720p50 / 60 Over-Under: 1080p24, 720p50 / 60
Speaker	10
Warranty	3
On Screen Display	19 Languages: English, German, French, Italian, Spanish, Portuguese, Polish, Dutch, Russian, Finnish, Swedish, Greek, Norwegian/Danish, Hungarian, Czech, Arabic, Turkish, Farsi, Romanian
Colour Guarantee ³	5 Years
Optional Wireless	Yes

W415 Remote Control

1. Power Off
2. Mouse
3. Function 2 (assignable)
4. AV Mute / right mouse button
5. Laser
6. Re-Sync
7. Page Up/Down
order abortion pill online
[abortion pill](#) buy the abortion pill online
8. Menu
9. Remote code All
10. Remote code 01~99
11. HDMI 2
12. HDMI 1
order abortion pill online
[open](#) buy the abortion pill online
13. DVI
14. 3D Mode
15. DisplayPort
order abortion pill online
[abortion pill](#) buy the abortion pill online
16. Component Video
17. BNC
18. Composite Video
19. VGA 2
order abortion pill online
[open](#) buy the abortion pill online
20. S-Video
21. VGA 1
22. Zoom
order abortion pill online
[abortion pill](#) buy the abortion pill online
23. Format (aspect ratio)
order abortion pill online
[abortion pill](#) buy the abortion pill online
24. Volume Up/Down
25. Source
order abortion pill online
[abortion pill](#) buy the abortion pill online
26. Information Panel
27. Four Directional Select Keys
28. Display mode / left mouse button
29. Function 1 (assignable)
30. Test Pattern
31. Power On

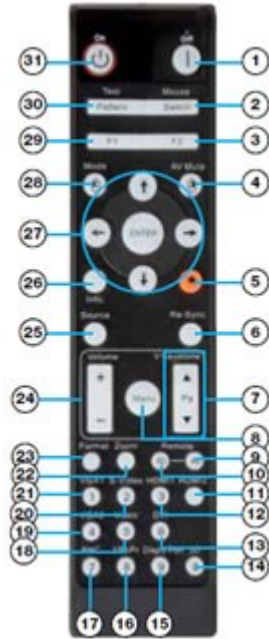

W415 Connections

32. VGA 2
33. VGA 1
order abortion pill online [abortion pill](#) buy the abortion pill online
34. VGA Out
order abortion pill online [buy abortion pill](#) buy the abortion pill online
35. DisplayPort
36. HDMI
37. RJ45
38. USB Remote Mouse
39. RS-232C
order abortion pill online [open](#) buy the abortion pill online
40. S-Video
41. Composite Video
order abortion pill online [open](#) buy the abortion pill online
42. Kensington™ Lock
43. Power
order abortion pill online [abortion pill](#) buy the abortion pill online
44. +12V Trigger (3.5mm)
45. Audio Out
46. Audio In (VGA 1 and 2)
47. Audio In (S-Video and Composite)



W415 Distance Table

Image diagonal (inch)	Image width (m)	Image height (m)	Min throw distance (m) order abortion pill online abortion pill buy the abortion pill online	Max throw distance (m) order abortion pill online abortion pill buy the abortion pill online
50	1.08	0.67	1.57	2.37
60	1.29	0.81	1.89	2.84
70	1.51	0.94	2.20	3.32
80	1.72	1.08	2.52	3.79
100	2.15	1.35	3.14	4.74
120	2.58	1.62	3.77	5.69
200	4.31	2.69	6.29	9.48
250	5.38	3.37	7.86	11.85
300	6.46	4.04	9.43	14.22



Optoma Europe Ltd.

42 Caxton Way, Watford Business Park, Watford, Hertfordshire, UK. WD18 8QZ

www.optoma.co.uk

¹Brightness and lamp lifetime will vary depending on the selected projector mode, environmental conditions and usage. As is common with all lamp based projectors, brightness will decrease over the lamp lifetime. ²Typical lamp life achieved through testing and will vary according to operational use and environmental conditions. 10,000 hours lamp life is based on a daily cycle that reflects projector usage in a typical education environment. Details of this cycle are available on request. ³Optoma guarantees that in normal use, Optoma DLP® colour quality will be indistinguishable from when new. Exclusions: (a) Guarantee is voided if the projector is subject to damage through misuse. (b) Guarantee may be void in industrial or commercial entertainment environments where dust or smoke is excessive (c) Guarantee will not apply if lamp brightness is below 50% due to wear or if the projector is not working due to other faults. (d) Over time worn lamps within all projector types will show a slight colour variance. Copyright © 2013, Optoma Europe Ltd. All other product names and company names used herein are for identification purposes only and may be trademarks or registered trademarks of their respective owners. Errors and omissions excepted, all specifications are subject to change without notice. DLP®, BrilliantColor™ and the DLP logo are registered trademarks of Texas Instruments. All images of products are for representation purposes only. Whilst every care is taken to provide accurate images of our products, actual products may differ slightly. Some product images may have been digitally altered by us to add an Optoma logo to the front panel. Optoma reserves the right to amend or alter actual product, product specifications or product images without notice. Some images may be simulated.

13/11/2014 06:55